

LiquidSpring Owner's Documents



D11747

Rev D | 9/2023

Table of Contents

INTRODUCTION	2
SUSPENSION RATING	2
SERIAL TAG	2
IMPORTANT SAFETY NOTICES	3
FLUID	3
VEHICLE TOWING	3
VEHICLE JACKING.....	3
VEHICLE TRAILERING	3
HIGHER ROLLOVER RISK.....	3
POST INSTALLATION WELDING	3
OPERATION	4
SYSTEM STARTUP	4
ON/OFF BUTTON.....	4
WARNING LIGHT	4
RIDE MODE ADJUSTMENT	4
RIDE HEIGHT ADJUSTMENT.....	4
DEPRESSURIZING THE SYSTEM	6
REPRESSURIZING THE SYSTEM	6
TEMPERATURE CHANGES	6
DOOR SWITCH TRIGGER.....	7
CALIBRATION	7
DISABLE/ENABLE HIGH HEIGHT.....	7
PREVENTATIVE MAINTENANCE	8
SERVICE INTERVALS	8
MAINTENANCE RECORD.....	9
CUSTOMER SERVICE	10

Introduction

This manual provides safety, operation, and maintenance information for the LiquidSpring® **Smart Suspension** system.

LiquidSpring LLC reserves the right to make changes and improvements to its products and publications at any time. Contact LiquidSpring LLC Customer Service for information on the latest version of this manual at 765-474-7816 or email: service@liquidspring.com

Before beginning any maintenance or servicing of the suspension system:

- Read and understand all instructions and procedures.
- Read and observe all Warning and Caution hazard alert messages in this publication. They provide information that can help prevent serious personal injury, damage to components, or both.
- Follow any company maintenance, service, installation, and diagnostics guidelines.
- Use proper tools when required to help avoid serious personal injury and damage to components.

IMPORTANT: Use only LiquidSpring components for servicing this suspension system. Use of improper components will void LiquidSpring Warranty.

Throughout this manual, important product information is indicated. These terms are defined as follows:

NOTE: Includes additional information to enable accurate and easy performance of procedures.

IMPORTANT: Includes additional information that if not followed could lead to hindered product performance and/or product failure.

CAUTION: A caution indicates procedures that must be followed exactly. Damage to equipment or suspension components and personal injury can occur if the procedure is not followed.

WARNING: A warning indicates procedures that must be followed exactly. Serious personal injury can occur if the procedure is not followed.

Suspension Rating

LiquidSpring suspension ratings are based on the OEM axle ratings of each chassis. The GAWR with LiquidSpring installed is the lesser of either the OEM original rating (as published) or the LiquidSpring suspension rating.

The first two (2) letters of the suspension model number represent the type of suspension:

FS – Front Suspension

DS – Drive Axle Suspension (Rear Suspension)

The next two (2) or three (3) numbers represent the suspension's maximum capacity in 100s of lbs.

Example: DS200 – 20,000 lbs. Rating

WARNING: Overloading suspension system may result in abnormal handling characteristics and premature wear of components.

Serial Tag

The serial number is found on the aluminum tag as shown in Figure 1. This information is required when contacting the chassis manufacturer or LiquidSpring LLC.

Rear Suspension – Front Hanger (Figure 1)

Front Suspension – Power Module Bracket (Figure 2) or Front Hanger (Figure 3)



Figure 1. Serial tag

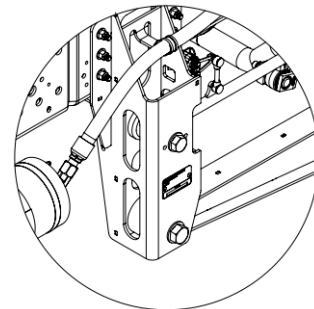


Figure 2. Serial Tag Location (Rear)

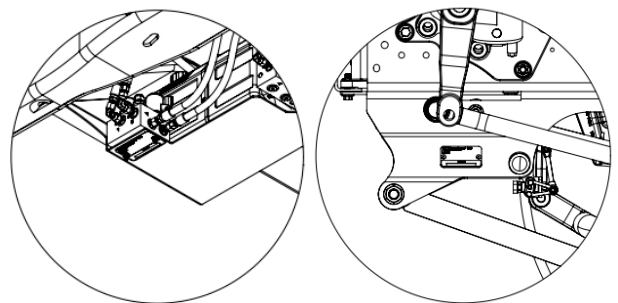


Figure 3. Serial Tag Locations (Front)

Important Safety Notices

Fluid

The LiquidSpring suspension system requires the use of a specific compressible fluid for proper operation. If additional fluid is needed, the fluid can be purchased directly from LiquidSpring LLC.

CAUTION: Adding any other fluid not obtained from LiquidSpring LLC to the system will result in incorrect operation of the system, and will likely damage critical components of the system, and will void the LiquidSpring Warranty.

WARNING: The system operates under high fluid pressure (up to 4000 psi). Follow proper procedures when installing LiquidSpring components. High pressure fluids can penetrate the skin and cause severe tissue damage.

Vehicle Towing

Before attempting any type of towing procedures, contact the Chassis OEM or Vehicle Manufacturer for instructions.

NOTE: Before towing vehicle, check with local authorities, such as Department of Transportation, for permissible towing methods. Some states do not permit towing vehicles by chains or towing straps.

Do not attach tow apparatus (hooks, chains, straps, etc.) to the suspension components.

WARNING: Attaching towing equipment to improper locations and failure to utilize Chassis OEM or Vehicle Manufacturer recommended towing methods could result in one or more of the following:

**Damage to the suspension and/or vehicle,
Loss of vehicle control,
Possible disconnect from the vehicle.**

Vehicle Jacking

The LiquidSpring suspension system should be turned "OFF" (see *Operation* section) before jacking vehicle. Jacks should never be applied to suspension components.

WARNING: Do not apply jack to bottom of front hanger or other suspension components. Applying a jack to improper locations can result in damage to the suspension and/or vehicle and severe personal injury.

Vehicle Trailering

The fluid in the LiquidSpring suspension system will expand/contract with changes in temperature. This results in movement of the suspension even with the system off. The system needs to be lowered and completely depressurized (see *Depressurizing the System in Operation* section) before strapping/chaining the chassis frame to the trailer. If vehicle is to be secured via wheels, suspension should be left at NORMAL ride height.

WARNING: If correct procedures are not followed, tie-downs can loosen, and vehicle could dislodge from trailer and cause serious injury.

Higher Rollover Risk

WARNING: Lifted vehicles have a significantly higher rollover rate than other vehicles.

Vehicles with a higher center of gravity (lifted and four-wheel drive vehicles) handle differently than vehicles with a lower center of gravity.

Avoid sharp turns, excessive speed, and abrupt maneuvers in these vehicles.

Failure to drive cautiously increases the risk of losing control of your vehicle, vehicle rollover, personal injury, and death.

Do not modify your vehicle in any way that would excessively raise the center of gravity.

Take corners at slower speeds than you would in a vehicle with a lower center of gravity.

Always drive at a safe speed.

Post Installation Welding

Prior to any chassis welding, disconnect negative cable(s) from chassis batteries; also disconnect LiquidSpring ECU header connectors and Power Module chassis ground connection. See Figure 4. Follow all OEM requirements for chassis welding.

WARNING: Failure of ECU may occur if not properly disconnected.


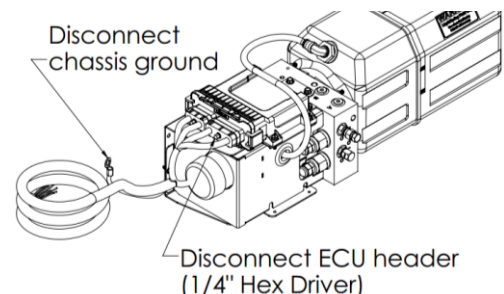


Figure 4. ECU Disconnection

Operation

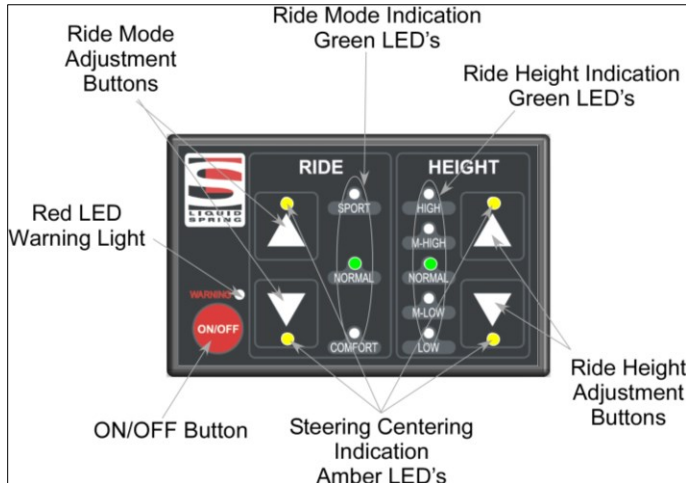

System Startup


- In most instances, the suspension system can be left alone to operate automatically.
- After startup, all the indicator lights will flash momentarily, and then a green Ride Height Indication LED and a green Ride Mode Indication LED will light to show the current Ride Mode and Ride Height.
- The four amber LEDs will be lit if the steering wheel is approximately straight.
- The amber lights will go off when the steering wheel is rotated more than approximately 20° off-center in either direction.
- If the vehicle is steered straight ahead and the four amber LEDs are not lit (and the red warning LED is not lit), or the amber LEDs do not go off when the steering wheel is rotated past 20° in either direction, see *Troubleshooting Guide*.

ON/OFF Button

Pressing the ON/OFF button will enable/disable the suspension. When the suspension is ON, relevant LEDs are lit up. When the suspension is OFF, none of the LEDs are lit.

- It is recommended to leave the suspension ON at all times, unless the vehicle or suspension is being serviced.
- For RV applications, turn system OFF when deploying leveling jacks.

IMPORTANT: After turning the vehicle ignition off, the ECU will monitor the suspension system for 4 hours, lowering as necessary.

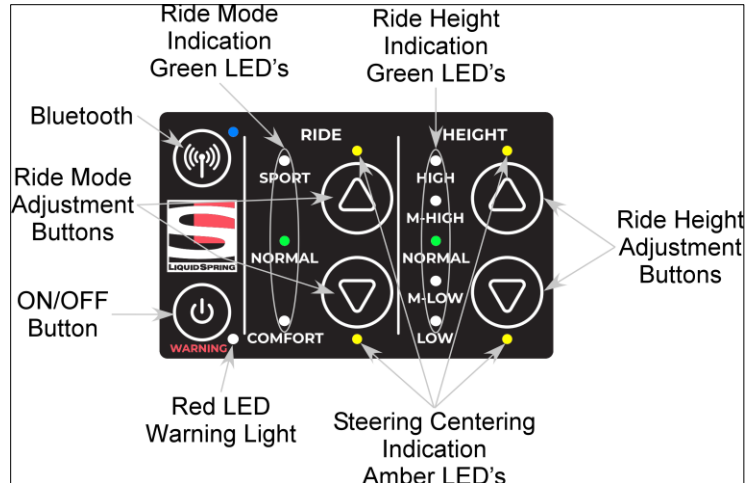

Warning Light

If the red LED Warning light is continuously illuminated or flashing, refer to the *LiquidSpring Troubleshooting Guide* for assistance.

Ride Mode Adjustment

Press the UP/DOWN arrow buttons to change the ride mode between SPORT, NORMAL, and COMFORT. The green indicator light will show the set mode.

- **Comfort Mode** provides a smooth, soft ride. Use for normal city and highway driving.
- **Sport Mode** provides more “feel” or response to the road conditions. Use where road conditions or personal preference demand more control.
- **Normal Mode** is a balance between Comfort and Sport. Use where more control than Comfort is desired, but better ride than Sport.

The setting can be changed at any time. Based on road conditions, steering wheel angle, and the vehicle speed, the system automatically adjusts to provide the best handling while providing a smooth ride. All three settings will feel similar on a smooth road.

Ride Height Adjustment

Press the UP/DOWN arrow buttons to change ride height from NORMAL to HIGH (body up) or LOW (body down).

- A solid green LED will indicate the selected height. A flashing green LED will indicate the current height and that height adjustment is occurring. When a single solid green LED is lit, the selected height has been achieved.
- Two solid green LEDs will be lit if the current height is not the selected height and height adjustment is not occurring.

- If LOW or HIGH heights are selected while the vehicle is traveling at less than 10mph or stopped, the suspension height is either lowered or raised.
- If LOW or HIGH heights are selected while the vehicle is traveling at greater than 10 mph, the suspension will ignore the selected height and remain in NORMAL height unless the vehicle speed goes below 10mph within 2 minutes of selecting the height. In this instance, the NORMAL height green LED will flash, and the selected height green LED will be lit solid until the speed goes below 10 mph within 2 minutes of selecting the height. If the vehicle speed doesn't go below 10mph within the 2-minute period, the suspension will remain in NORMAL height indicated by only the NORMAL height green LED lit solid.

NOTE: As a safety feature, if height is set to LOW or HIGH, and then vehicle is driven over 15 mph, the suspension will automatically return to NORMAL height.

- If LOW height is selected and the ignition is turned off before LOW height is achieved, the system will continue to lower to LOW height.
- If HIGH height is selected and the ignition is turned off before HIGH height is achieved, the system will stop adjusting ride height.
- The door switch kneeling function (if equipped) is disabled when the driver display LOW or HIGH height is selected before the door is opened on vehicles equipped with a door switch.

NOTE: The door switch trigger is only available from the NORMAL ride height position. The driver interface will take precedence/override the door trigger.

- After ignition is turned off, the system will monitor the selected ride height and will only lower as necessary up to 4 hours.

NOTE: The LiquidSpring suspension ride heights (Normal, Low, & High) are pre-determined by LiquidSpring Engineering and are not adjustable.

The following table shows the selection and indication of available ride heights:

RIDE HEIGHT DESCRIPTION	DRIVER INTERFACE OPERATION	FRONT RIDE HEIGHT	REAR RIDE HEIGHT	RIDE HEIGHT LED (2 Corner)	RIDE HEIGHT LED (4 Corner)
All Up (AU)	From RH: P&R UP 2 times. From RU: P&R UP 1 time.	HIGH	HIGH	N/A	<input checked="" type="radio"/> HIGH <input type="radio"/> M. HIGH <input type="radio"/> NORMAL <input type="radio"/> M. LOW <input type="radio"/> LOW
Rear Up (RU)	From RH: P&R UP 1 time	NORMAL	HIGH	<input checked="" type="radio"/> HIGH <input type="radio"/> M. HIGH <input type="radio"/> NORMAL <input type="radio"/> M. LOW <input type="radio"/> LOW	<input type="radio"/> HIGH <input checked="" type="radio"/> M. HIGH <input type="radio"/> NORMAL <input type="radio"/> M. LOW <input type="radio"/> LOW
Ride Height (RH)	From AU: P&R DOWN 1 time. From RU: P&R DOWN 1 time. From RD: P&R UP 1 time From AD: P&R UP 1 time <i>Auto Select, Speed > 15 MPH</i>	NORMAL	NORMAL	<input type="radio"/> HIGH <input type="radio"/> M. HIGH <input checked="" type="radio"/> NORMAL <input type="radio"/> M. LOW <input type="radio"/> LOW	<input type="radio"/> HIGH <input type="radio"/> M. HIGH <input checked="" type="radio"/> NORMAL <input type="radio"/> M. LOW <input type="radio"/> LOW
Rear Down (RD)	From RH: P&R DOWN 1 time **Rear Door Trigger**	NORMAL	LOW	<input type="radio"/> HIGH <input type="radio"/> M. HIGH <input type="radio"/> NORMAL <input type="radio"/> M. LOW <input checked="" type="radio"/> LOW	<input type="radio"/> HIGH <input type="radio"/> M. HIGH <input type="radio"/> NORMAL <input checked="" type="radio"/> M. LOW <input type="radio"/> LOW
All Down (AD)	From RH: P&R DOWN 2 times. From RD: P&R DOWN 1 time. **Side Door Trigger**	LOW	LOW	N/A	<input type="radio"/> HIGH <input type="radio"/> M. HIGH <input type="radio"/> NORMAL <input type="radio"/> M. LOW <input checked="" type="radio"/> LOW
Depressurize	(2 Corner Mode): From RD: P&H DOWN (4 Corner Mode): From AD: P&H DOWN	FULL LOW	FULL LOW	<input type="radio"/> HIGH <input type="radio"/> M. HIGH <input type="radio"/> NORMAL <input type="radio"/> M. LOW <input checked="" type="radio"/> LOW	<input type="radio"/> HIGH <input type="radio"/> M. HIGH <input type="radio"/> NORMAL <input type="radio"/> M. LOW <input checked="" type="radio"/> LOW

P&R = Press and Release P&H = Press and Hold

Depressurizing the System

1. Turn the ignition key to "Run" and ensure that the LiquidSpring driver display LEDs light up and that the red "Warning" LED is not lit or flashing. If the red "Warning" LED is lit or flashing, refer to the *Troubleshooting Guide*.

WARNING: Do not run vehicle in an enclosed building without adequate ventilation or without ducting exhaust fumes outside. Operation of a vehicle inside an enclosed building can lead to serious injury or death.

2. The LEDs on the driver display should all flash and then only the four amber arrow LEDs, one green ride mode indicator LED, and one green ride height indicator LED should remain lit.
3. From NORMAL Ride Height, press and release the HEIGHT DOWN arrow button to lower the rear to the LOW height. For four corner systems, press and release HEIGHT DOWN arrow button a second time to lower the front.
4. After LOW height has been achieved, press and hold the HEIGHT DOWN arrow button for approximately 2 minutes.
5. While holding the HEIGHT DOWN arrow button, press and release the ON/OFF button to disable the system. Release the HEIGHT DOWN arrow button.
6. Turn off the vehicle ignition.

If any of the hydraulic components are to be removed for service, it is recommended to also follow these steps:

1. Locate 3/16" ID PVC Tubing.

Note: Alternatively, a bleed kit similar to the Actron 7840 Bleed Kit can be used.

2. Attach the PVC tubing to one of the upper bleed screws on the Volume Assembly and place the other end in a catch bucket or tray.
3. Open the bleed screw slightly to relieve any residual pressure.
4. After pressure is relieved, close the bleed screw and torque to 13-18 ft-lbs.
5. Repeat steps 2-4 for any suspension corner being worked on.

Notes:

- Jacking up the chassis of a lowered, depressurized chassis will cause a slight vacuum in the system and minimize fluid loss while disconnecting hoses.
- For service of hydraulic connected suspension components (and certain non-hydraulic components), the suspension system can be first raised to the HIGH height, appropriate jack stands placed under the chassis, then depressurized as

listed above lowering the chassis onto the jack stands.

Repressurizing the System

1. Turn the ignition key to "Run" and ensure that the LiquidSpring driver display LEDs light up and that the red "Warning" LED is not lit or flashing. If the red "Warning" LED is lit or flashing, refer to the *Troubleshooting Guide*.
2. The LEDs on the driver display should all flash and then only one green ride mode indicator LED, one green ride height indicator LED, and four amber arrow LEDs should remain lit.
3. If jack stands were placed under the frame prior to depressurizing, press and release the HEIGHT UP arrow to raise the vehicle to HIGH height.
4. Remove jack stands.
5. Press and release the HEIGHT DOWN arrow to lower the vehicle to NORMAL height.

If any of the hydraulic components were removed for service, a system bleed should be conducted to remove air trapped in the system:

1. Locate 3/16" ID PVC Tubing.
2. Attach the PVC tubing to one of the upper bleed screws on the Volume Assembly and place the other end in a catch bucket or tray.
3. Open the bleed screw slightly to release trapped air.
4. After large air bubbles are no longer present, close the bleed screw and torque to 13-18 ft-lbs.

Note: Suspension may move when bleeding the system.

Temperature Changes

The **Smart Suspension** utilizes a compressible liquid for its spring and damping, which expands and contracts with temperature changes.

While parked for an extended time with the vehicle and/or suspension system turned off, suspension ride height will change with temperature change. Increases in ambient temperature or parking in direct sunlight can cause the suspension ride height to increase. Decreases in temperature can cause the suspension ride height to decrease.

When system is turned on again, the suspension will automatically return to the selected ride height.

While the suspension system can be used immediately upon start-up, it is recommended to allow the suspension system to automatically adjust the ride height for a brief period (less than 30 seconds) before driving away. Some ride harshness may be noticed until NORMAL ride height is achieved.

The suspension system functions normally within a temperature range of -40°F to 140°F (-40°C to 60°C).

Door Switch Trigger

The door trigger is an optional function that allows the suspension to be automatically kneeled when the rear door is opened. On vehicles equipped with LiquidSpring front and rear suspension systems, a side door trigger is also available to kneel all four corners.

Rear Only:

- Opening the rear door will set the suspension to Rear Down (RD) and the rear suspension will lower to a kneeled position.
- If the system and ignition are ON and the rear door is closed, the system will return to NORMAL height.

Front & Rear:

- Opening the rear door will set the suspension to Rear Down (RD) and the rear suspension will lower to a kneeled position.
- Opening the side door will set the suspension to All Down (AD) and the front and rear suspension will lower to a kneeled position.
- If the side door is closed, and the rear door is open, the front suspension will return to NORMAL and the rear suspension will remain kneeled.
- If the rear door is closed, and the side door is open, the front and rear suspension will remain kneeled.

Notes:

- Door trigger function is only active if the Driver Display is set to NORMAL height, the system and ignition are turned ON, and for 1 hour after the vehicle ignition is turned off.
- The door switch can be over-ridden by the Driver Display height selections.
- If the system and ignition are OFF and a door is closed, lowering will cease, but the suspension will not raise to NORMAL. Suspension will raise when ignition and system are turned ON.
- If the system and ignition are ON and the door is re-opened, the suspension will resume lowering to the kneeled position.
- If the system and ignition are OFF and the door is reopened, the suspension will only resume lowering to the kneeled position if the 1-hour time period hasn't elapsed since turning off the ignition.

Calibration

- LiquidSpring suspensions are recommended to be calibrated by the up fitter during installation. Calibrations may also be required after certain service or repairs. Routine calibrations are not required or recommended.

- The steering sensor will auto-calibrate (auto-center) during routine driving conditions. The sensor does not require routine calibration.

NOTE: If you are experiencing issues with your suspension, contact LiquidSpring Customer Service.

Disable/Enable High Height

- The HIGH Ride Height feature can be disabled on LiquidSpring suspensions if desired. Contact Customer Service to obtain the proper procedure.

Preventative Maintenance

Service Intervals

Once Daily or Before Each Shift

1. Check the suspension system to be sure it is fully operational:
 - Start vehicle.
 - Steer straight ahead.
 - Verify the red Warning LED is not lit or flashing.
 - Verify all LEDs on the driver display flash briefly, then one green Ride Height and one green Ride Mode LEDs remain lit (if at target ride height).
 - Verify the four amber LEDs are lit when the steering wheel is centered.
 - Verify that the amber LEDs go out when the steering wheel is rotated past 20° off-center.
 - Verify that the system is at NORMAL ride height, with a steady green LED.
 - If the Driver Display indicates a blinking ride height LED, allow the system to complete leveling as indicated by a steady green LED.
 - If LOW or HIGH height is shown with a solid green LED, use the arrow buttons to raise or lower the suspension to NORMAL height.
2. Visually inspect struts, hoses, and fittings for signs of leakage.
 - For leakage resulting in fluid pooled on the floor greater than 1" in diameter, it is recommended to service the system immediately.
 - For signs of leakage or weeping that results in wetness on components or a single drop, it is recommended to monitor the leak and schedule repair service accordingly.
3. Visually inspect Power Module Breather.
 - If the desiccant beads in the Desiccant Power Breather are bright pink, it is recommended to replace the breather. See Figure 5 & 6.
 - Contact LiquidSpring for replacement.
P/N: 11789-001

Initial 1,000 Miles (1,600 km) Inspection

1. Inspect bolts and nuts at the control arm pivots to assure they are properly torqued.
2. Inspect U-bolts to assure they are properly torqued.

Note: Torque values can be found in the Installation Manuals specific to each suspension.

3. Thoroughly inspect all hydraulic connections for signs of leakage.
4. Inspect reservoir fluid level.

Routine Maintenance 25,000 miles (40,000 km) or 6-month maximum Interval

1. Check all suspension components for any signs of damaged/broken components, looseness, or wear.
2. Inspect bolts and nuts at the control arm pivots to assure they are properly torqued.
Note: Torque values can be found in the Installation Manuals specific to each suspension.
3. Inspect bolts and nuts at both the frame and axle mount ends of the track rod to assure they are properly torqued.
4. Inspect U-bolts to assure they are properly torqued.
5. Thoroughly inspect all hydraulic connections for signs of leakage.
6. Inspect reservoir fluid level.



Figure 5. New Breather (Blue)



Figure 6. Used Breather (Pink)

[illegible]

Customer Service

If your LiquidSpring **Smart Suspension** is exhibiting any errors or erratic behavior, please contact LiquidSpring LLC Customer Service for instructions regarding diagnosis and/or replacement of any component. Suspension literature, including manuals, applications guides, and brochures can be found on the LiquidSpring website: <https://liquidspring.com/literature/>

LiquidSpring® LLC

4899 E 400 S
Lafayette, IN 47905

Phone: 765-474-7816

Fax: 765-474-7826

Web: www.liquidspring.com

Email: service@liquidspring.com



Information contained in this publication is subject to change without notice or liability. LiquidSpring® LLC reserves the right to revise the information presented or discontinue the production of parts described at any time.