

Driver Interface Installation - Touchscreen



This document provides detailed instructions for installing the LiquidSpring®
Smart Suspension Touchscreen Driver Interface

Instructions

1. Cut out the drill template at the bottom of the page
2. The template will represent the driver interface, place it on the dash in desired position.
3. Make sure "FRONT" is visible on the template and the arrow is pointing up.
4. Use the template to mark and drill a 9/16" hole in the dash.
5. Locate the Driver Interface (p/n: 10680-006) and feed the cable through the hole in the dash.

Drill Template

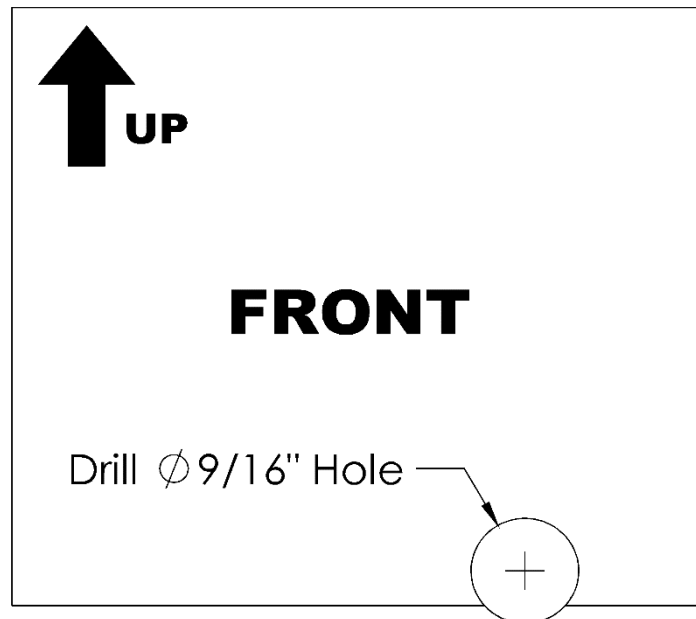


Figure 1. Drill Template